

Deep Space Lighting

FREIGHTLINER CENTURY/COLUMBIA/ CORONADO LED FOG LIGHT KIT

Estimated Installation Time: 15-30 minutes

Installation Instructions

Tools Needed:
#2 Philips screwdriver
T25 Torx driver and ratchet

NOTE: If the truck has been exposed to road salt or otherwise rusty, soaking the fog light mounting bolts with a penetrating oil is advised.

Package contents:

2 Morimoto Type U LED Fog Lights
2 Stainless trim rings
16 Stainless M5 screws
8 Threaded Standoffs



4 Stainless M4 screws
4 Clamping nuts
2 Adapter harnesses

1. Remove fog lamp housing:
 - a) Make sure lights are turned off, and raise hood.
 - b) Lift retaining clips while pulling apart to remove plug from bulb.
 - c) Remove 4 screws from back of fog light housing using T25 driver. of fog lamp housing.
 - d) Remove fog light from front side of bumper.



2. Loosen but do not remove M4 screws (top and bottom) on LED fog light trim ring.
3. Insert fog light from front side of bumper, making sure clamping nuts are behind bumper opening.



<p>4. Make sure fog light is right-side-up, and align M4 screws vertically at 12-o'clock and 6-o'clock.</p>	
<p>5. Tighten M4 screws while holding light in place.</p>	
<p>6. Connect adapter harness to LED fog light; connect opposite end to factory connector. Red wire should connect to factory power wire, black to ground. <i>NOTE: It may be difficult to read markings on factory wiring. Don't worry about it—if you get it wrong and the light doesn't come on, simply reverse the plug.</i></p>	
<p>7. Repeat steps 1-6 for other side of truck. Confirm that both sides are working, and proceed to aiming in next step.</p>	
<p>8. Check fog light aim by measuring the height of the upper edge of the beam when aimed at a wall approximately 25 feet away. Adjust aim by turning grey adjuster screw (Philips) on bottom of fog light housing until top edge of beam on the wall is at the same height as the fog light.</p>	

Troubleshooting Tips

Symptom:	Cause:	Remedy:
Light doesn't come on	Terminals on blue connector installed backwards	Release terminal retaining clip with small screwdriver, reverse orientation, and reinstall.